

Backrest/Lumbar Support Height


While seated, grasp backrest with both hands on lower corners. Squeeze handle at right with fingertips and move backrest to most comfortable height.

Seat Height

Lift up on lever under right side of seat cushion and position chair to desired height.

Optional Headrest

Grasp headrest with both hands and move to desired position.

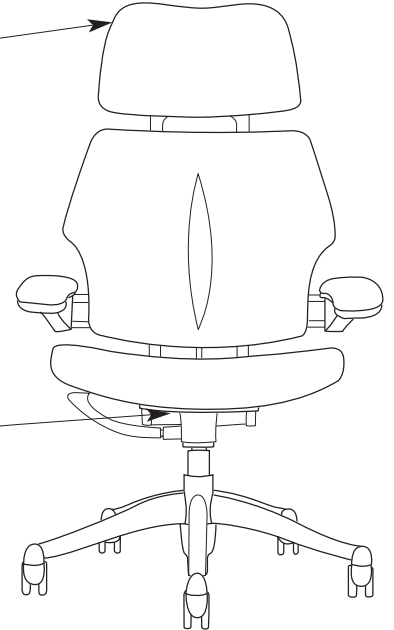

Seat Depth


Lift up on lever under forward edge of seat, and slide seat to desired position.

Synchronous Armrests

Both of the gel-cushioned armrests on Freedom can be adjusted synchronously with one hand, without touching any release buttons.


To Raise

Gently pull upward on the armrests and raise to desired position. They will automatically lock in place when released.

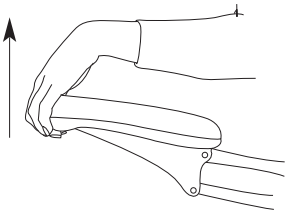

To Lower

Lift up on front edge of armrests to disengage. Lower to desired position. The armrests will automatically lock in place when released.

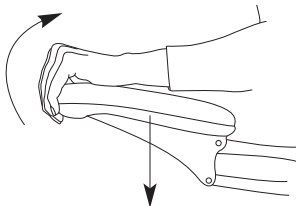

Advanced Armrests (Optional)

Depress the button on the side of Freedom's optional pivoting armrests inward to move the armrests to any position within a 35° arc of motion. The armrests will lock in place when released.

